




## LIGHTBAR SPECIFICATION SHEET

PART No: 18213

DESCRIPTION :

SOLEX47MCSSPEAKER-C142776

Cable : Quick Disconnect with 22' Cable  
Mounting Kit : Metal Mounting kit LX Kit

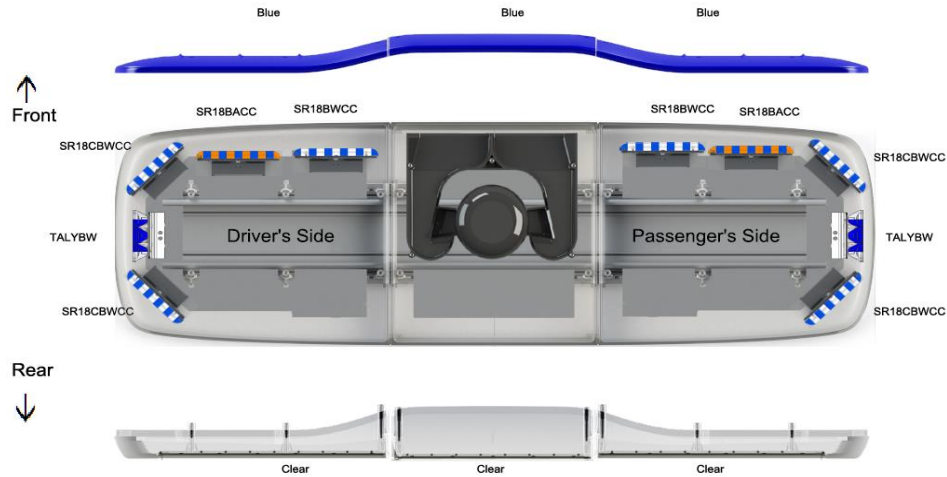

| Wire Color               | Function                    | Notes                      |
|--------------------------|-----------------------------|----------------------------|
| GRN/BLK                  | Level 1 (R65)               |                            |
| WHT/BLK                  | Level 2 (Blue rear only)    |                            |
| BLU/BLK                  | Turn Signal Right           |                            |
| GRN/WHT                  | Turn Signal Left            |                            |
| WHT                      | SPEAKER +                   |                            |
| BLU/WHT                  | SPEAKER +                   |                            |
| BLK                      | Code3 CC communication      | Connection 4 molex 4 Black |
| BLK/WHT                  | Code3 CC communication      | Connection 2 molex 4 Black |
| RED                      | Code3 CC communication      | Connection 3 molex 4 Black |
| RED/WHT                  | Code3 CC communication      | Connection 1 molex 4 Black |
| RED/BLK                  | Level 3 (Full Blue)         |                            |
| ORG/BLK                  | Takedown Lights Steady Burn |                            |
| BLK/RED                  | SPEAKER -                   |                            |
| GRN                      | Cruise Lights               |                            |
| ORG                      | SPEAKER -                   |                            |
| BLU                      | Lightbar DIM                |                            |
| RED 1,5mm <sup>3</sup>   | Positive Lightbar           |                            |
| RED 1,5mm <sup>3</sup>   | Positive Lightbar           |                            |
| RED 1,5mm <sup>3</sup>   | Positive Lightbar           |                            |
| BLACK 1,5mm <sup>2</sup> | Ground                      |                            |
| BLACK 1,5mm <sup>2</sup> | Ground                      |                            |
| BLACK 1,5mm <sup>2</sup> | Ground                      |                            |
| BLACK 1,5mm <sup>2</sup> | Ground                      |                            |

Notes:

- L1 = Level 1 (R65)
- L2 = Level 2 (Blue Rear Only)
- L3 = Level 3 (Full Blue Cycle Flash)
- L1 + L2 = Blue Front Only
- L1 + L3 = Level Blue Cycle Flash + Front White Cycle Flash
- all functions are positive inputs
- Dim function dims the complete lightbar